

CARTRIDGE INSTALL & FLUSH



4-STAGE Reverse Osmosis with Valves



Cartridges

- Stage 1** – Coconut Shell Carbon
- Stage 2** – Cellulose Fibre
- Stage 3** – Reverse Osmosis Membrane
- Stage 4** – Super Alkaliser Minerals

Cartridge Order for Flushing (Left to Right) - 1, 4, 3, 2

Flushing Valve Position

ON when the blue lever is parallel to the tube (or in horizontal position) and OFF when the blue lever is perpendicular to the tube (or vertical position)

Configuration for FLUSHING

Left flushing valve ON, Right flushing valve OFF


Configuration for DRINKING

Left flushing valve OFF, Right flushing valve ON

On the left hand side of the head is a white and blue flush valve. The valve is used to flush out the two carbon filters (Cartridges 1 and 4) before configuring for drinking.

- The RO Tank needs to be switched off before flushing and the tap on top of the sink turn off before flushing.
- Then turn ON the left hand side flush valve and CLOSE the right hand side flush valve. [The flush valves being the white and blue valves on side of the head].
- **To flush** install Cartridges in the following order (left to right): 1, 4, 3, 2
- Turn water on at source. This will flush cartridges 1 and 4 down the drain. Flush for 7 minutes and then turn water source back off.
- Once flushed put the left flush valve on side of head back to OFF and the flush valve on the right back to ON.
- Place the cartridges in the **correct order** for drinking. Follow the numbers from left to right 1,2,3,4.
- Turn the water from the source back on, and turn on tap on top of sink to let air out and it will start to dribble.
- Then turn off tap on top of sink and turn the RO Tank valve to on. The tank will start to fill. It normally takes 30 minutes. Ready to drink.

NOTE: When filter system is used and tap off is turned off after use, they will hear waste water going down the drain. This water will eventually stop.

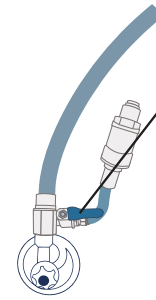


Under sink, turn isolation valve off.



• Turn tap off on tank


FLUSHING

- Connect cartridges in the following order - 1, 4, 3, 2

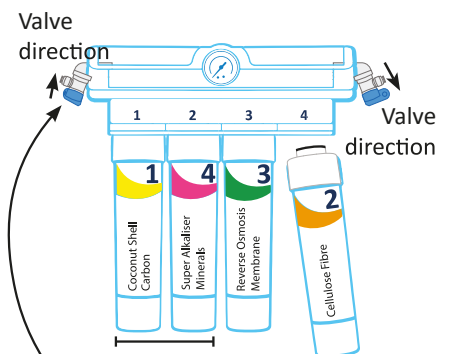

Use left side tap to flush first two filters for 7 minutes.

- Replace cartridges in correct order - 1, 2, 3, 4

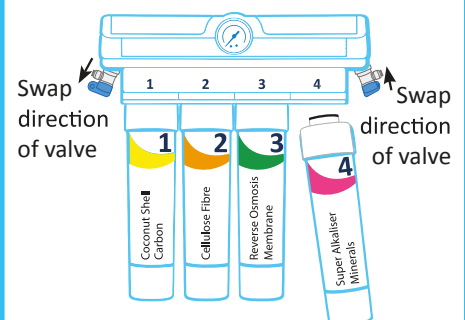

- Turn tank and water isolation tap back on.

CARTRIDGE INSTALL & FLUSH



FOR OLDER SYSTEMS

4-STAGE

Reverse Osmosis (without Valves)

If your system is an older style it may not have the white and blue valves on the side of filter head



Cartridges

Stage 1 – Coconut Shell Carbon

Stage 2 – Cellulose Fibre

Stage 3 – Reverse Osmosis Membrane


Stage 4 – Super Alkaliser Minerals

Cartridge Order for Flushing (Left to Right) - 1, 4

If this is the case, follow the directions below:

- The RO Tank needs to be switched off before flushing and the tap on top of the sink turn off before flushing.
- **To flush** place Cartridges #1 and #4 in slots 1 and 2.
- Place a bucket under slot 3. Turn on water source and run for approximately 5-7 minutes (Flush until the water runs clear)
- When the water is running clear, turn off the water source. Place the cartridges in the **correct order** for drinking. Follow the numbers from left to right 1,2,3,4.
- Turn the water from the source back on, and turn on tap on top of sink to let air out and it will start to dribble.
- Then turn off tap on top of sink and turn the RO Tank valve to on. The tank will start to fill. It normally takes 30 minutes. Ready to drink.

NOTE: When filter system is used and tap off is turned off after use, they will hear waste water going down the drain. This water will eventually stop.

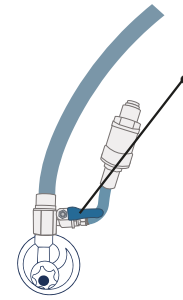


Under sink, turn isolation valve off.



• Turn tap off on tank


FLUSHING

- Connect cartridges in the following order - 1, 4

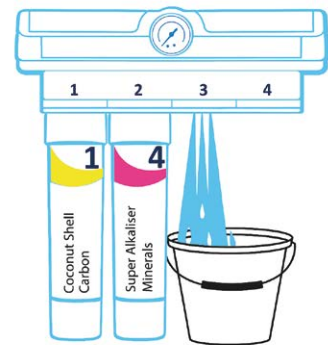

Flush for 5-7 minutes

- Replace cartridges in correct order - 1, 2, 3, 4

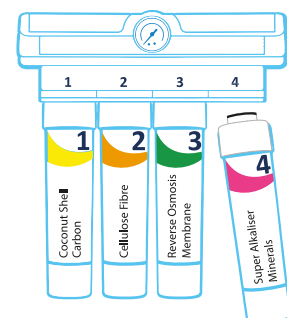

- Turn tank and water isolation tap back on.